


## 10 Operating Installations and Installation

### 10-1 Product Features

#### 10-1-1 Front

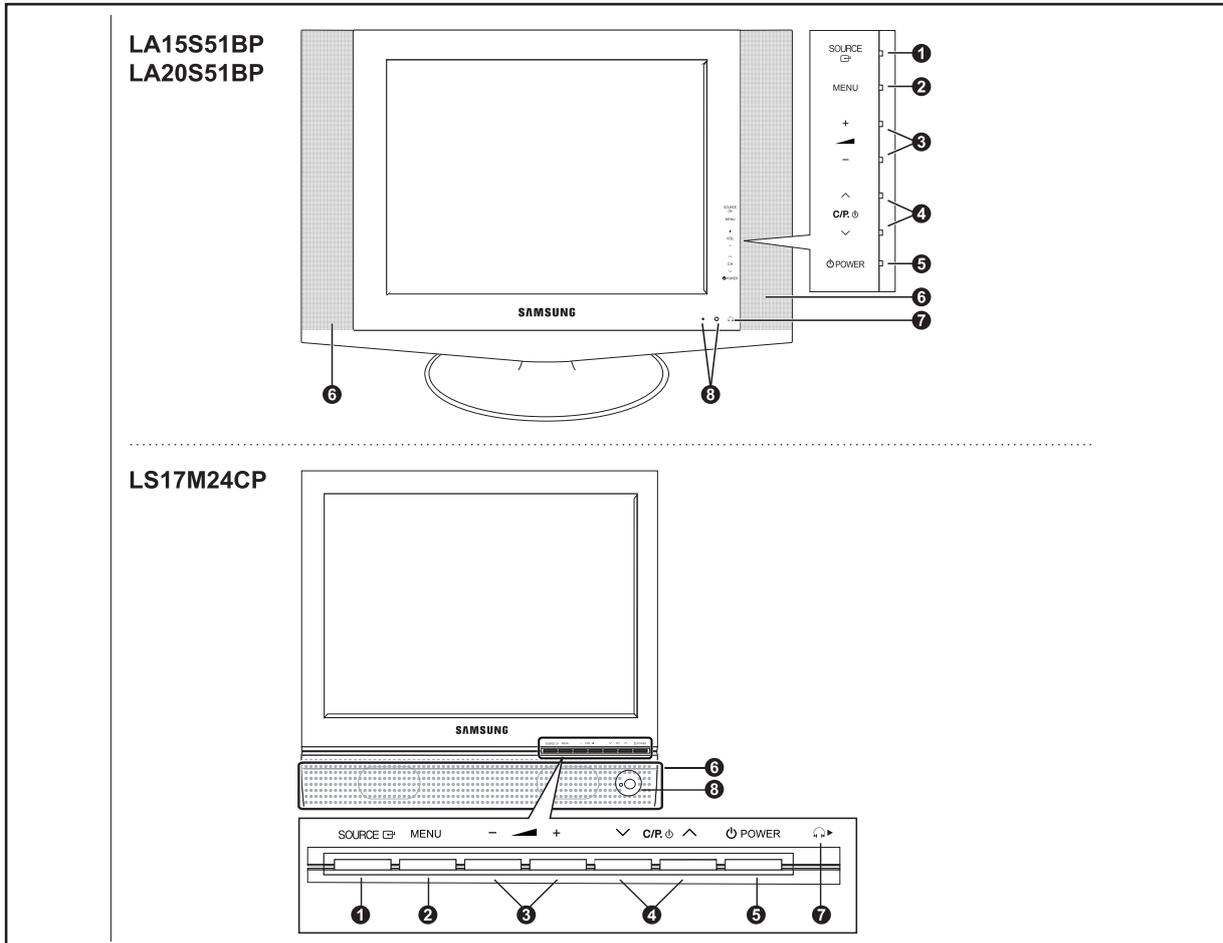

#### 1. SOURCE

Toggles between all the available input sources (TV - AV - S-Video - Component - PC).

In the on-screen menu, use this button as you use the ENTER  button on the remote control.

#### 2. MENU

Press to see an on-screen menu of your TV's features.

#### 3. - +

Press to decrease or increase the volume.

In the on-screen menu, use the -  + buttons as you use the  and  buttons on the remote control

#### 4. C/P.

Press to change channels. In the on-screen menu, use the  C/P.  buttons as you use the  and  buttons on the remote control.

(Without the Remote Control, You can turn on the TV by using the Channel buttons.)

#### 5. POWER

Press to turn the TV on and off.

#### 6. SPEAKERS

#### 7. HEADPHONE JACK

Connect a set of external headphones to this jack for private listening.


#### 8. REMOTE CONTROL SENSOR

Aim the remote control towards this spot on the TV.

#### POWER INDICATOR

Blinks and turns off when the power is on and lights up in stand-by mode.

10-1-2 Back

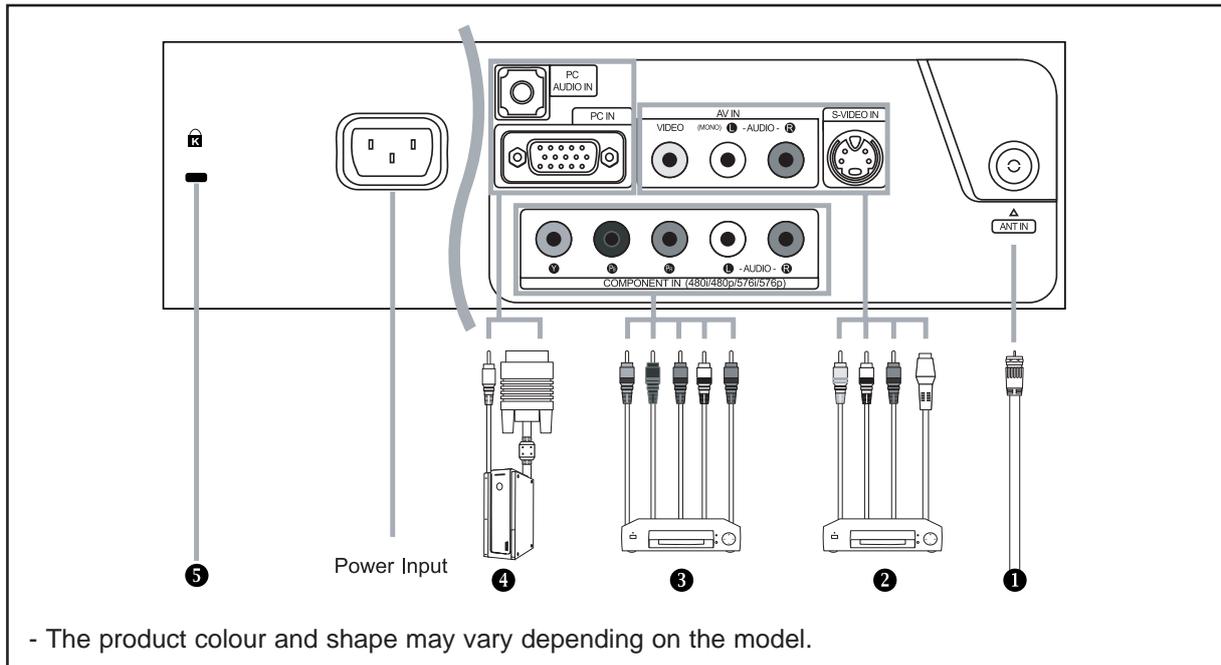

**1. Connecting an Aerial or Cable Television Network**

To view television channels correctly, a signal must be received by the set from one of the following sources:

- An outdoor aerial / A cable television network / A satellite network

**2. Connecting External A/V Devices**

- Connect RCA (optional) or S-VIDEO cable (optional) to an appropriate external A/V device such as VCR, DVD or Camcorder.
- Connect RCA audio cables (optional) to "L - AUDIO - R" on the rear of your set and the other ends to corresponding audio out connectors on the A/V device.

**3. Connecting Component Devices (DTV/DVD)**

- Connect component video cables (optional) to component connector ("Y", "PB", "PR") on the rear of your set and the other ends to corresponding component video out connectors on the DTV or DVD.
- If you wish to connect both the Set-Top Box and DTV (or DVD), you should connect the Set-Top Box to the DTV (or DVD) and connect the DTV (or DVD) to component connector ("Y", "PB", "PR") on your set.
- The PR, PB and Y connectors on your component devices (DTV or DVD) are sometimes labeled Y, B-Y and R-Y or Y, Cb and Cr.
- Connect RCA audio cables (optional) to "L - AUDIO - R" on the rear of your set and the other ends to corresponding audio out connectors on the DTV or DVD.


**4. Connecting Computer**

- Connect the D-Sub cable (optional) to "PC IN" on the rear of your set and the other end to the Video Card of your computer.
- Connect the stereo audio cable (optional) to "PC AUDIO IN" on the rear of your set and the other end to "Audio Out" of the sound card on your computer.

**5. Kensington Lock**

- The Kensington lock (optional) is a device used to physically fix the system when used in a public place.
- If you want to use a locking device, contact the dealer where you purchased the TV.
- The place of the Kensington Lock may be different depending on its model.

10-1-3 Remote Control

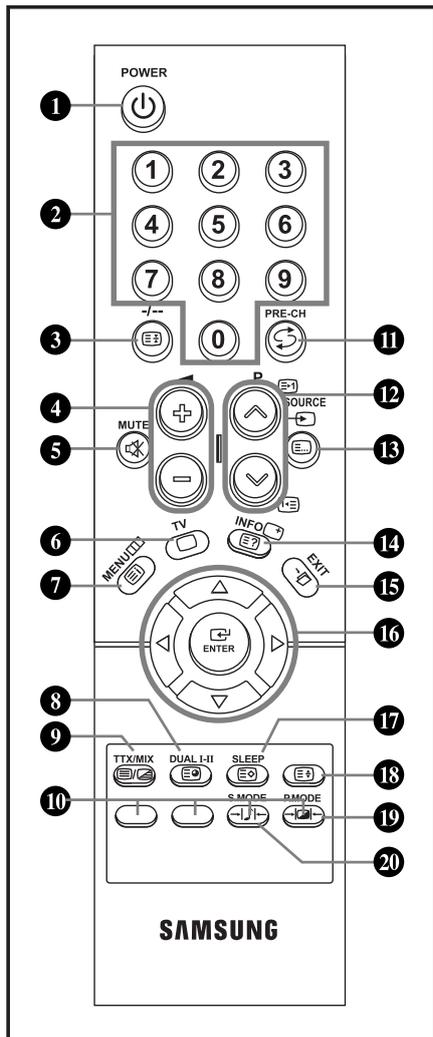

- 1 Television Standby button
- 2 Number buttons for direct channel access
- 3 One/Two-digit channel selection
- 4 ⊕ : Volume increase  
⊖ : Volume decrease
- 5 Temporary sound switch-off
- 6 Selects the TV mode directly
- 7 Displays the main on-screen menu
- 8 Sound effect selection
- 11 Previous channel
- 12 P ⊕ : Next channel  
P ⊖ : Previous channel
- 13 Available source selection
- 14 Use to see information on the current broadcast
- 15 Exit the on-screen menu
- 16 Control the cursor in the menu
- 17 Automatic Power-off
- 19 Picture effect selection
- 20 Sound mode selection


Teletext Functions

- 3 Teletext hold
- 6 Exit from the teletext display
- 7 Teletext index
- 8 Teletext sub page
- 9 Teletext display/mix both teletext information and the normal broadcast
- 10 Fastext topic selection
- 12 P ⊕ : Teletext next page  
P ⊖ : Teletext previous page
- 13 Teletext mode selection (LIST/FLOF)
- 14 Teletext reveal
- 17 Teletext store
- 18 Teletext size selection

- The performance of the remote control may be affected by bright light.
- For details, refer to further instructions.

## 10-2 Installation Notes and Precautions


### 10-2-1 How to Adjust the Stand

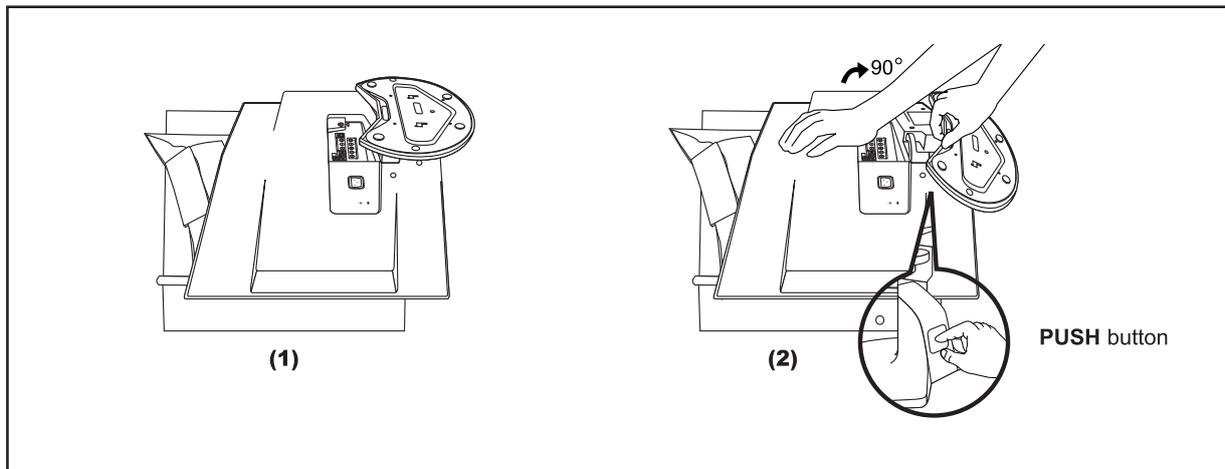

1. Place the front of the TV onto a soft cloth or cushion on a table as in Figure (1).
  - Align the TV bottom along the table edge.
2. Press on the center of the TV back.
  - Adjust the stand as in Figure (2) while pressing the  $\text{PUSH}$  button on the back of the stand.
3. Place the TV on the table so that the TV sits safely.

► When you adjust the stand, press the "PUSH" button on the back of the stand.

### 10-2-2 Installing VESA compliant mounting devices

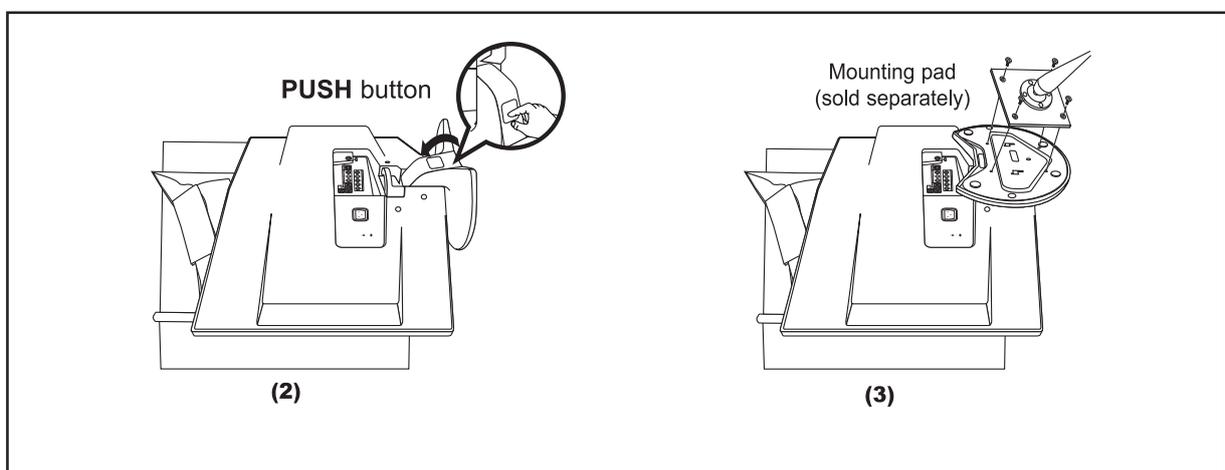

1. Place the TV faced down on a soft cloth or cushion on a table.
2. Adjust the stand, pressing the "PUSH" button on the back of the stand.
3. Align the mounting interface pad (not supplied) with the holes in the stand bottom and secure it with the four screws that come with the arm-type base, wall mount hanger or other bases (not supplied).

► When you adjust the stand, press the "PUSH" button on the back of the stand.