

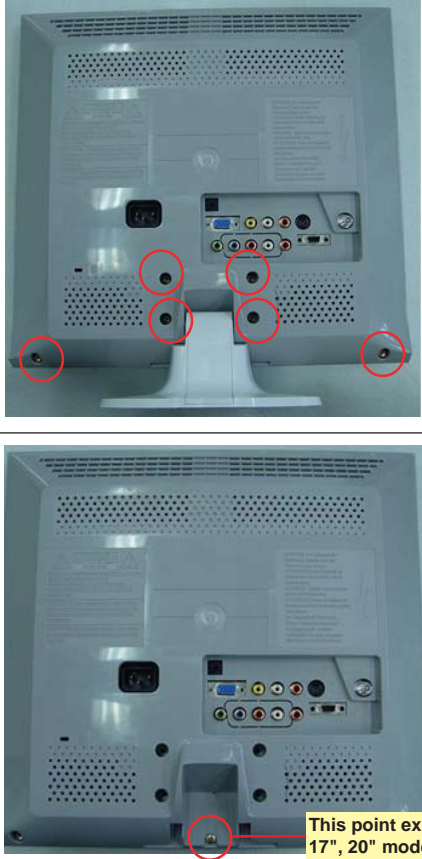
11 Disassembly and Reassembly

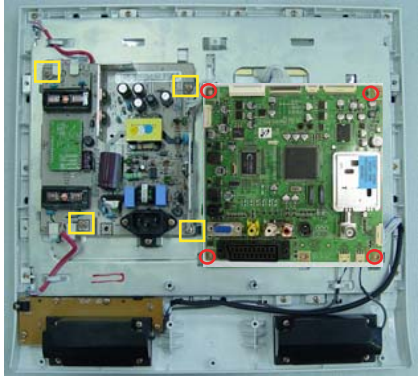
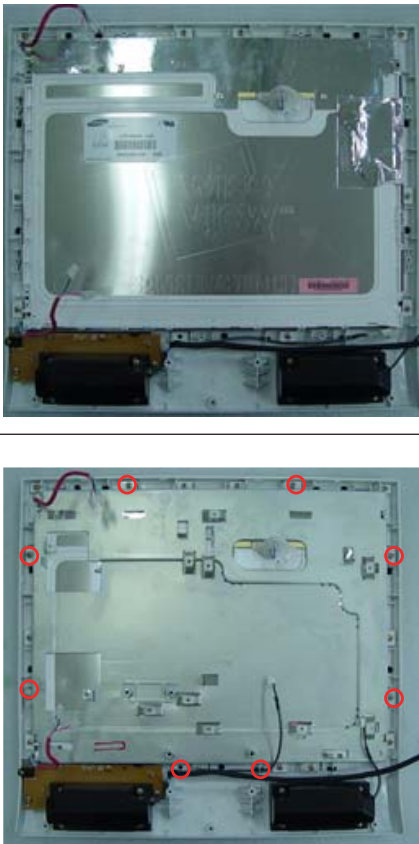
This section of the service manual describes the disassembly and reassembly procedures for the LA15S51BP / LS17M24CP / LA20S51BP LCD TV.

⚠ **WARNING:** This monitor contains electrostatically sensitive devices. Use caution when handling these components.

11-1 LS17M24CP Disassembly


- ⚠ **Cautions:**
1. **Disassembly stand on the flat desk.**
 2. **Before disassembly set , separate other Cables and Power cord.**

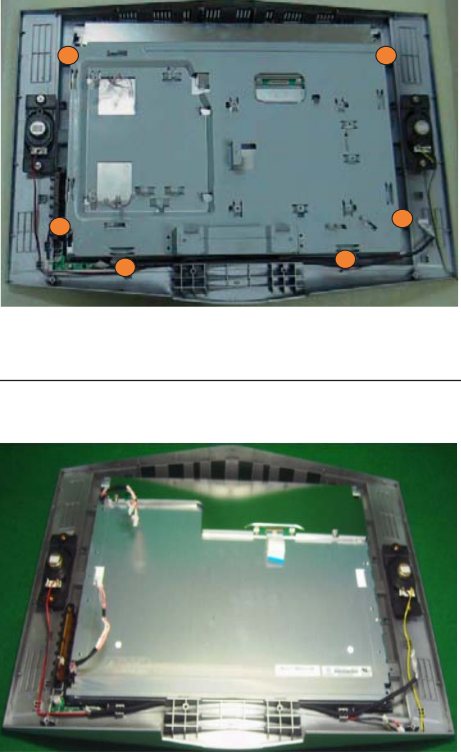
Description	Picture Description
<p>1. Separate the screw. (6 point)</p>	 <p>This point exists only 17", 20" model.</p>

Description	Picture Description
<p>2. Separate screw.</p>	 <p>The image shows the internal components of the device chassis. A green main board is visible on the right side. Several screws are highlighted with yellow and red circles, indicating the locations where they should be removed.</p>
<p>3. Separate harness of the Panel with the IP Borad with the Main Board. Separate screw between Panel and Front. (8 point)</p>	 <p>The top image shows the front bezel assembly with the panel attached. The bottom image shows the same assembly from the back, with red circles highlighting the eight screw locations that need to be removed to separate the panel from the front bezel.</p>

11-2 LA15S51BP/LA20S51BP Disassembly

- ⚠ Cautions: **1. Disassembly stand on the flat desk.**
2. Before disassembly set , separate other Cables and Power cord.

Description	Picture Description
<p>1. Separate the screw. (6 point)</p>	
<p>2. Separate screw.</p>	

Description	Picture Description
<p>3. Separate harness of the Panel with the IP Borad with the Main Board. Separate screw between Panel and Front. (6 point)</p>	

11-3 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.