


11 Disassembly and Reassembly

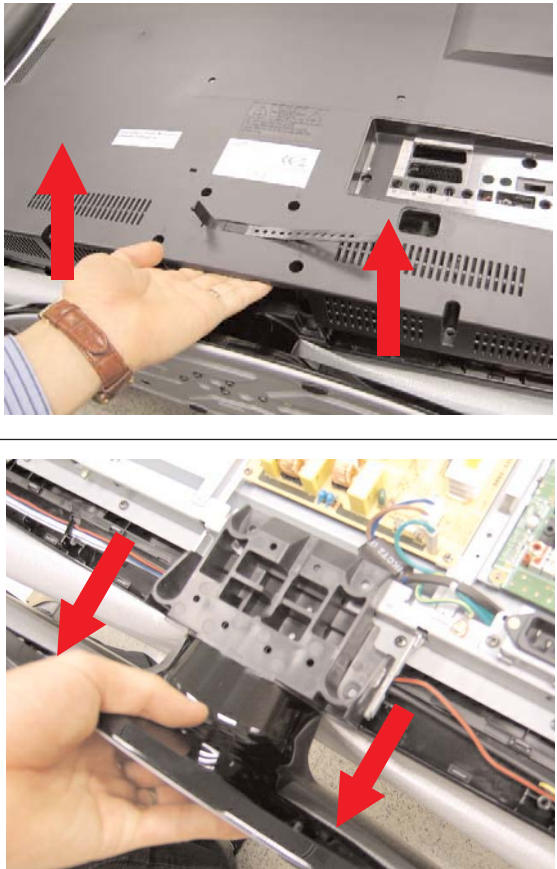
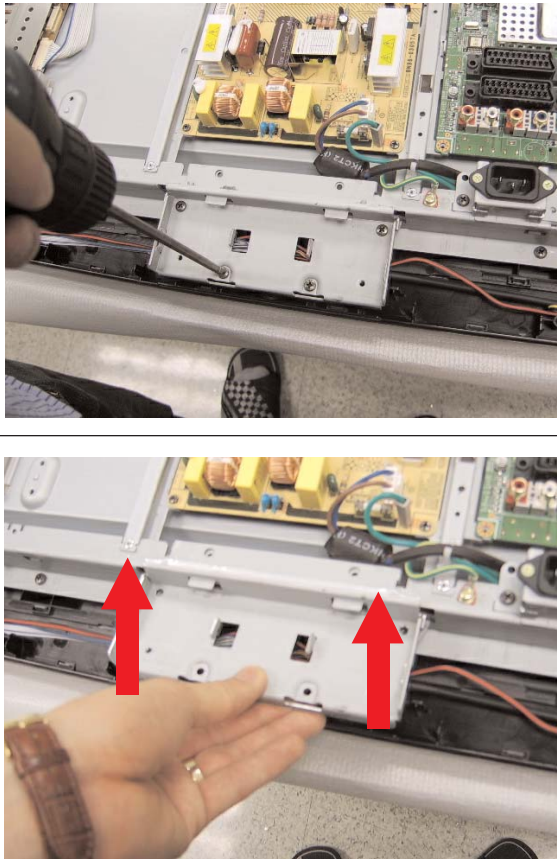
This section of the service manual describes the disassembly and reassembly procedures for the TFT-LCD TV.

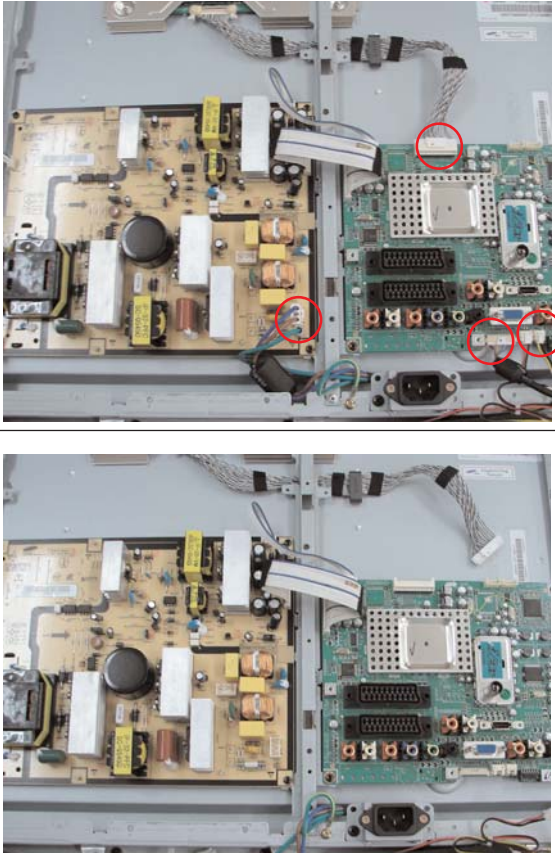
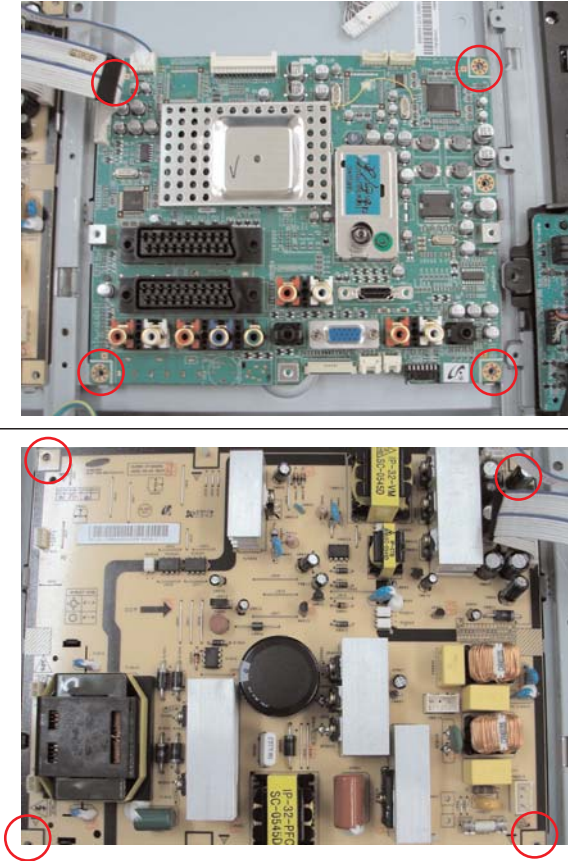
⚠ WARNING : This monitor contains electrostatically sensitive devices. Use caution when handling these components.

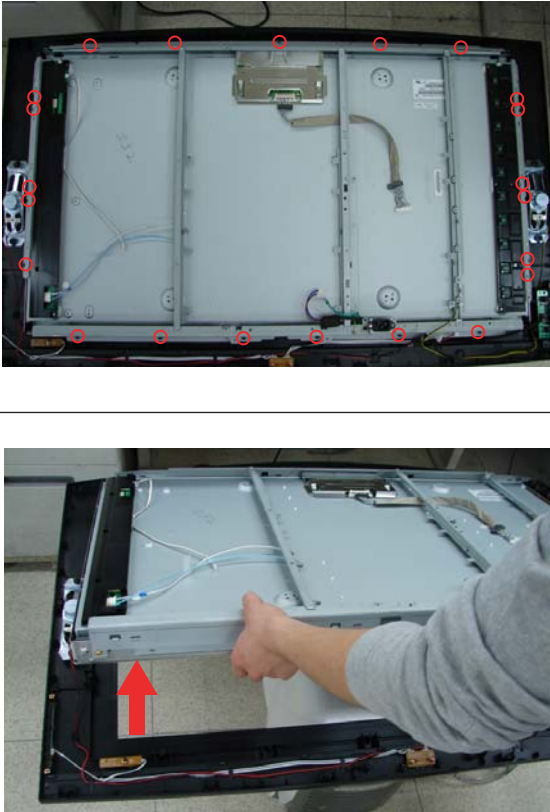
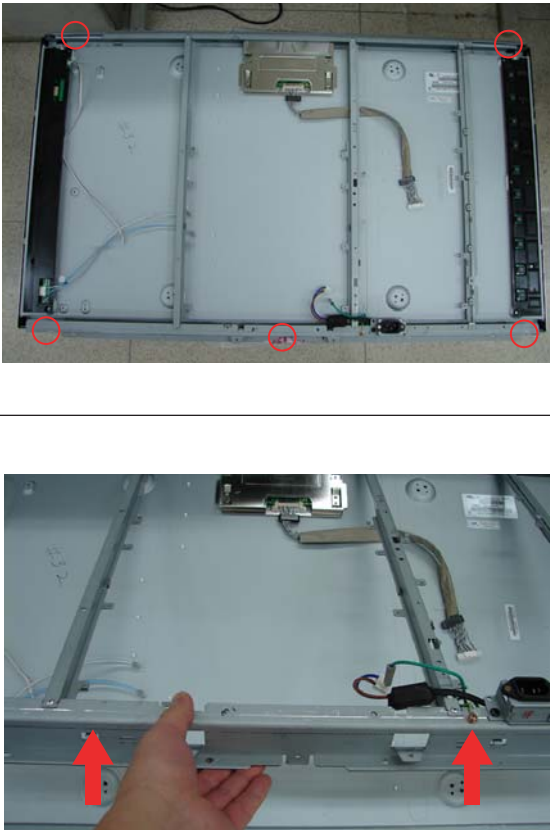
11-1 Disassembly


⚠ Cautions : 1. Disconnect the monitor from the power source before disassembly.
2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

Description	Picture Description
<p>1. Place monitor face down on cushioned table. Remove screws from the rear cover. Remove screws from the stand.</p>	 <p>The top photograph shows the back of a grey TFT-LCD TV monitor with its black stand. The bottom photograph is a close-up of the rear cover, showing a hand using a screwdriver to remove one of four screws. Each screw location is highlighted with a red circle.</p>

Description	Picture Description
<p>2. Lift up the rear cover and remove the stand.</p>	 <p>The top photograph shows a person's hand lifting the rear cover of the device. Two red arrows point upwards from the bottom edge of the cover, indicating the direction of movement. The bottom photograph shows the stand being detached from the chassis. Three red arrows point downwards from the stand, indicating its removal.</p>
<p>3. Remove Screws from the stand BRKT and lift up the stand BRKT.</p>	 <p>The top photograph shows a screwdriver being used to remove a screw from the stand bracket. The bottom photograph shows the stand bracket being lifted up. Two red arrows point upwards from the bottom of the bracket, indicating the direction of movement.</p>

Description	Picture Description
<p>4. Disconnect cable from the boards.</p>	
<p>5. Remove screws from the boards and lift up the boards.</p>	

Description	Description Picture
<p>6. Remove screws and Lift up the Lcd panel.</p>	
<p>7. Remove 5 screws from the BRKT. Lift up the BRKT.</p>	

Description	Description Picture
	

11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.

Memo